C7000 SERIES

OKI® GENUINE Toner Cartridge

Type
C2

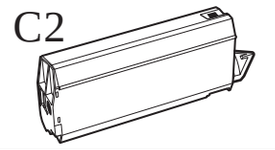

1. Turn the printer off and open the cover.

2. Push the lock lever (1) toward the front of the printer until it stops. Lift the right end of the toner cartridge (2) up and slide out of port.

Removing black drum shown for reference only.

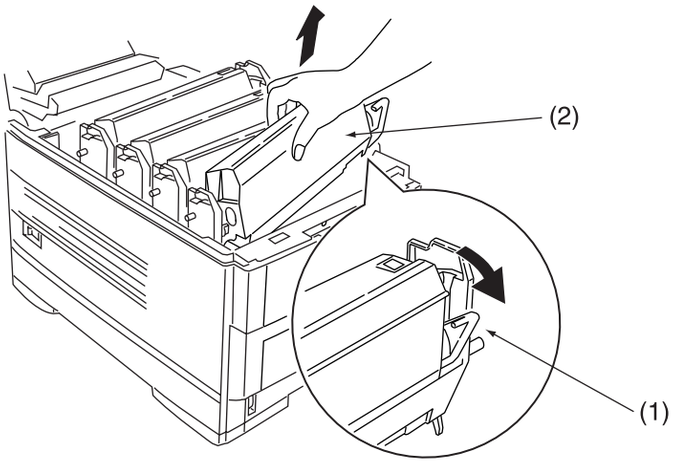

3. Unpack the toner cartridge and shake it back and forth.

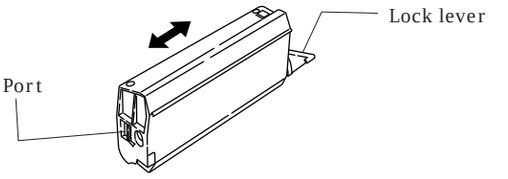

4. Hold the cartridge in a horizontal position and remove the tape.

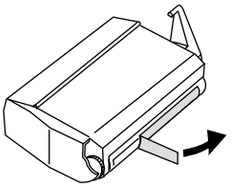

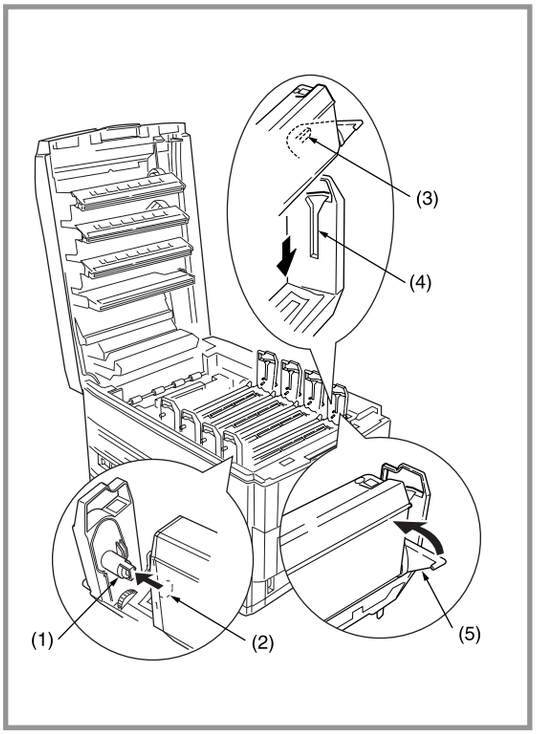

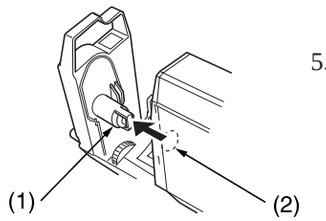

5. Hold the cartridge in the ***vertical*** position and lower the port end of the cartridge into the image drum so that the tube (1) on the drum slides into the port (2) on the toner cartridge.

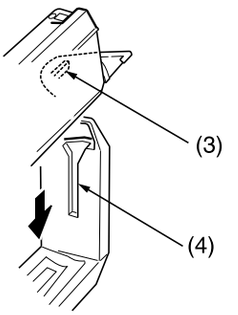

6. Press the cartridge toward the tube on the drum, then lower the lock lever end, aligning the white tab (3) with the groove (4) in the drum.

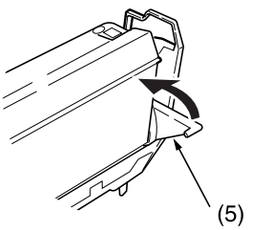

7. Push the lock lever (5) toward the back of the printer until it stops.

! *To avoid damage to the printheads, be sure to push the lock lever (5) back* ***as far as it will go.***

(Continued on back)

Sheet P/N 58346201

8. Use the LENS cleaner pad to wipe the corresponding LED array clean.

9. Close the cover and turn the printer back on.

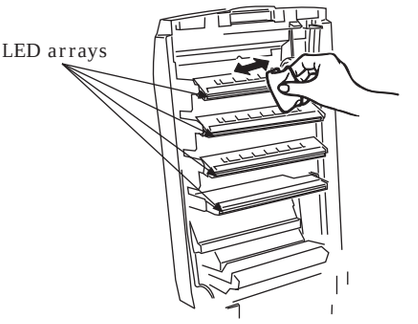

Oki Data Americas, Inc. (Oki Data) warrants this Oki Data Consumable item (hereinafter Consumable) to be free from defects in material and workmanship under normal and proper use, provided however, that it is properly stored and maintained in the original packaging. This *Limited Warranty* is subject to the conditions set forth herein and shall remain in effect for a period of ninety (90) days from the date of purchase by the end user.

Should a Consumable which has been properly stored and maintained in the original packaging be determined by Oki Data to be defective, it will be repaired or replaced, at Oki Data's option, at no charge to the end user.

To make claim under this *Limited Warranty*, the original purchaser must return the Oki Data product to the place of original purchase or to Oki Data. Consumables returned to Oki Data are to be returned in the original package or equivalent, shipper to bear cost of shipping and risk of loss in transit and must be accompanied by a written receipt for the product, showing the date of purchase, dealer's name and item purchased.

THIS *LIMITED WARRANTY* IS THE SOLE AND EXCLUSIVE WARRANTY OFFERED ON THIS CONSUMABLE ITEM, AND OKI DATA OFFERS NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE.

Oki Data shall not be responsible or liable for any special, incidental or consequential damages or loss arising from the use of this product.

This *Limited Warranty* applies to all Oki Data Consumables, however the procedure for obtaining coverage under this *Limited Warranty* is available by contacting the Oki Data dealer from whom the product was purchased, by contacting Oki Data directly at 1-800-OKI-DATA (U.S. and Canada), or by contacting one of the Oki Data service centers listed below.

Oki Data Service Centers

UNITED STATES

Oki Data Americas, Inc.
Tel: 1-800-654-3282
Fax: 1-609-222-5247

CANADA

Oki Data Americas, Inc.
Tel: 800-654-3282
Fax: 905-238-4427

MEXICO

Oki Data de Mexico, S.A. de C.V.
Tel: (525) 661-6860
Fax: (525) 661-5861

BRAZIL

Oki Data do Brasil, Ltda.
Tel: 55-11-5011-1518
Fax: 55-11-5012-0267

For the most comprehensive, up-to-date listing of Oki Data authorized Service Centers:

- Consult our web site at **www.okidata.com**
- In the U.S. and Canada, call 1-800-OKI-DATA (1-800-654-3282)

OKI is a registered trademark / marque déposée / marca registrada, Oki Electric Industry Company

---